



MONARCH INSTRUMENT

Instruction Manual



ACT-1B Series Panel Tachometer

15 Columbia Drive
Amherst, NH 03031 USA

Phone: (603) 883-3390

Fax: (603) 886-3300

E-mail: support@monarchinstrument.com

Website: www.monarchinstrument.com

Printed in the U.S.A.
Copyright 2009 Monarch Instrument, all rights reserved

1071-4843-111R

0909



Safeguards and Precautions



1. Read and follow all instructions in this manual carefully, and retain this manual for future reference.
2. Do not use this instrument in any manner inconsistent with these operating instructions or under any conditions that exceed the environmental specifications stated.
3. Be sure the power supplied to this instrument matches the specification indicated on the rear panel of the instrument.
4. Be sure all power is removed before making or removing any connections to or from this instrument.
5. This instrument is not user serviceable. For technical assistance, contact the sales organization from which you purchased the product or Monarch Instrument directly.



In order to comply with EU Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE): This product may contain material which could be hazardous to human health and the environment. DO NOT DISPOSE of this product as unsorted municipal waste. This product needs to be RECYCLED in accordance with local regulations, contact your local authorities for more information. This product may be returnable to your distributor for recycling - contact the distributor for details.

Monarch Instrument's Limited Warranty applies. See www.monarchinstrument.com for details.

Warranty Registration and Extended Warranty coverage available online at www.monarchinstrument.com.

DECLARATION OF CONFORMITY

As Manufacturer:

Monarch Instrument

Division of Monarch International Inc.

15 Columbia Drive, Amherst NH 03031 USA

declares under Monarch's sole responsibility that the product:


Name: ACT - Panel Tachometer
Models: ACT-1B

to which this declaration relates is in conformity with the following standards:

EMC: EN50082-1:1997
EN50082-2:1995
EN55011:1991 Group 1 Class B

and therefore conforms with the requirements of Council Directive 89/336/EEC relating to electromagnetic compatibility. (File R-351 4N2).

8th October 1999
Manufacturer (Amherst,NH)

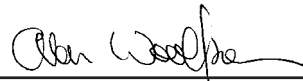
Alan Woolfson, VP Engineering (Authorized Signature)

| | |
|--|--|
| @CH_A/LOEND = 12 (or 1_SEC, HALF) | Sets low end time. This allows a min reading of 5 RPM, 60 RPM, or 120 RPM. |
| @CH_A/GATE | Shows Gate Speed. (Default is 12) |
| @CH_A/GATE = STD (1/100 Second) or FAST (1/1000 second). | Sets Gate Speed (Default is 1/100) |
| @DECPT | Shows the number of decimal places displayed |
| @DECPT = NONE, 1, 2, or 3 | Sets the maximum number of decimal places |
| @DAC1/ FSCAL | Shows Analog Out Full Scale |
| @DAC1/FSCAL = xxx.xx | Sets the Reading value that the Analog output will output Full Scale (5V or 20mA). Depends on TYPE. |
| @DAC1/0SCAL | Shows Analog Out Zero Scale |
| @DAC1/0SCAL = xxx.xx | Sets the Reading value that the Analog output will output Zero Scale (0V or 4mA). Depends on TYPE. (Default is 0.00) |
| @OUTPT | Shows pulse output polarity |
| @OUTPT = POS or NEG | Sets pulse output polarity |
| @DISPR | Shows Display Update Rate |
| @DISPR = HALF or 1_SEC or 1.5_S. | This sets the maximum display update rate to one half a second, 1 second or 1 ½ seconds between updates. |
| @SERNO | Shows unit Serial Number |

TABLE OF CONTENTS

| | |
|--|----|
| OVERVIEW | 1 |
| INSTALLATION and POWER | 1 |
| Installation | 2 |
| Power | 2 |
| USB Programming Cable and Software | 3 |
| SENSOR CONNECTIONS | 3 |
| OUTPUT OPTIONS | 4 |
| Current Output Option (IO) | 5 |
| Analog Output Option (AO) | 6 |
| Pulse Repeater Option (PO) | 6 |
| SPECIFICATIONS | 7 |
| OPTIONS | 8 |
| ACCESSORIES / SENSORS | 9 |
| APPENDIX A - Serial Programming Commands | 10 |

OVERVIEW

The ACT-1B is an economical and easy to use digital tachometer that displays rotational speed directly in RPM or RPS on a 5-digit red 0.56" high LED display using a speed sensor providing a single (or multiple) pulse(s) per revolution. The number of pulses per rev is factory set at time of ordering and can be user programmed from 1 to 999 using the optional USB Programming Cable and PM Remote Software. Power may be either universal 100 to 240 Vac (50/60Hz), or optionally, 12 Vdc or 24 Vdc isolated. The ACT-1B accepts input signals from optical, proximity, magnetic, infrared or laser sensors, or direct TTL or external ac inputs. The ACT-1B is suitable for panel mounting or bench top use with convenient screw terminal connections on the rear panel of the instrument.

If specified at time of order placement, the ACT-1B may be equipped with either an optional 4 to 20 mA current output (IO) or 0 to 5 Vdc analog output (AO) proportional to speed, and/or a TTL pulse repeater output (PO).

INSTALLATION and POWER

The ACT-1B enclosure is a standard 1/8 DIN size requiring a 3.58" wide by 1.74" high (91x44 mm) mounting hole.

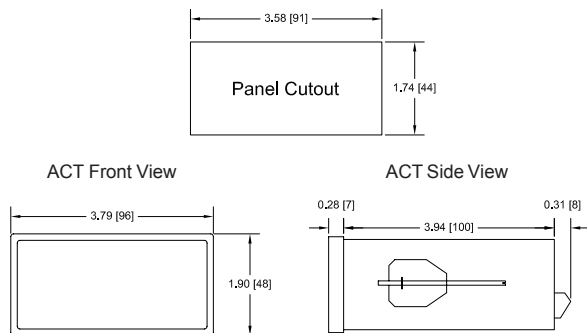


Figure 1 Dimensions in Inches (mm)

Appendix A - Serial Programming Commands

Programming the unit requires the optional USB Programming Cable with associated PM Remote software and a PC running Windows XP or later with an available USB port.

All serial commands are @ then two or more characters or words separated by a delimiter “/”. One or two numbers follow some commands. All valid commands respond immediately with an “OK” or data, or “ERR” if incorrect. Default baud rate is 9600.

Communication requires the USB Programming Cable.

@PI Product Information, Shows Product name \n Firmware revision \n
@C2 Shows all settings
@D0 Sends current display value once
@D1 Sends display data continuously (at up to display update rate)
@D2 Stops sending data
@MX Sends Max reading
@MN Sends Min reading
@RE 32 Resets Max
@RE 64 Resets Min
@RE 96 Resets Max and Min

@CH_A/TYPE Shows current type
@CH_A/TYPE = RPM Sets scale to 60 so displays in RPM.
@CH_A/TYPE = FREQ Sets scale to 1 so displays in hertz.
@CH_A/TYPE = SCALE Scale mode. Enter Scale factor.
@CH_A/TYPE/SCALE = 30.00 This will set the SCALE factor to 30.00

@CH_A/INPUT Shows sense of the trigger input
@CH_A/INPUT = POS (or NEG) Sets the sense of the input trigger
@CH_A/LOEND Sets how long (in secs) with no pulses before the tachometer shows 0.

ACCESSORIES / SENSORS

- T-5** Reflective Tape - 5 foot (1.5 m) roll, 0.5 inch (10 mm) wide
- USB Programming Cable with PM Remote Software on CD:**
Enables the user to program the ACT-1B using a PC with USB connection. The software also allows remote monitoring of the RPM using a graphic display or an Excel™ spreadsheet.
- ROLS-W** Remote Optical Laser Sensor with 8 foot cable
- ROS-W** Remote Optical Sensor with 8 foot cable
- ROS-P-25** Remote Optical Sensor with 25 foot cable (must cut plug off)
- ROS-HT-W-25** Remote Optical Sensor for high temperature applications to 257 °F (125 °C) with 25 foot cable
- P5-11** Proximity Sensor
- M-190W** Magnetic Sensor with 8 foot cable
- MT-190W** Magnetic Trigger Sensor with Amplifier Module, 8 foot cable
- GE-200** Gasoline Engine Electromagnetic Inductive Sensor and amplifier with 23 feet of cable
- IRS-W** Infrared Sensor with 8 foot cable

Installation

Remove the mounting clips, if fitted, and install the unit into the panel from the front. From the rear of the unit, install the mounting clips on each side and tighten the mounting screws against the rear of the panel.

WARNING: Do not over tighten the mounting screws.

Power

Power to the unit is connected to the terminals under the section labeled **POWER** on the rear panel. Be sure the power supplied matches the specification indicated on the rear panel. Refer to Figure 2 below.

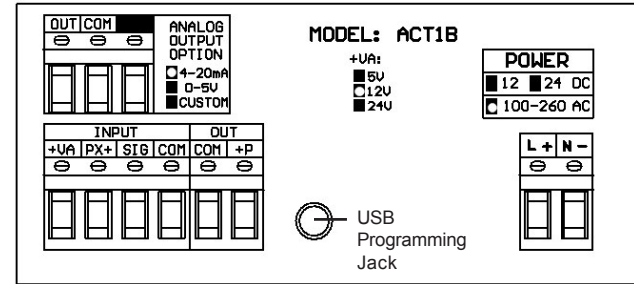


Figure 2 ACT-1B Rear Panel

If the unit is **ac powered** (100 - 240 Vac), connect the Live (Hot) wire to the terminal marked **L+** and the Neutral (Return) wire to the terminal marked **N-**.

If the unit is **dc powered**, connect the dc supply Positive to the terminal marked **L+** and the dc supply Negative or Common to the terminal marked **N-**.

USB Programming Cable and Software

The 3.5 mm connection “hole” in the center bottom of the rear panel is for the optional USB Programming Cable (p/n 6180-031), which comes with Windows™ compatible PM (Panel Meter) Remote Software on CD. The cable and software combination allows the user to configure: operation mode, analog output scaling, decimal places, display update rate and pulses per input. The user can also view real time data in digital format and/or through Microsoft® Excel. Software instructions are included on the software CD.

SENSOR CONNECTIONS

A speed sensor (not included) is connected to the terminals under the section labeled **INPUT** on the rear panel. Refer to Figures 2 and 3.

Connections and their functions are as follows:

- +VA** Positive +12 Vdc to provide power to optical, laser, infrared or amplified magnetic sensors. Maximum load is 75 mA dc. Optionally 5 or 24 Vdc supply may be ordered.
- PX+** Positive +12 Vdc supply for use with two-wire proximity sensors. Maximum load for proper operation with two-wire sensors is 25 mA.
- SIG** Positive input signal from the speed sensor. Accepts TTL pulses or ac signals, unipolar and bipolar, from 1.5 Vac to 50 Vac. (Contact the factory for increased sensitivity.) Connect the signal wire from three-wire sensors or the positive side of two-wire magnetic sensors to this terminal. Typical input impedance is 10 Kohms.
- COM** Common or Negative connection for both signal and power from most sensors.

Refer to Figure 3 for connection of Monarch standard sensors. The connections are typical for these types of sensors.

This product is designed to be safe for indoor use under the following conditions (per IEC61010-1):

| | |
|----------------------------------|--|
| Installation Category II | per IEC 664 |
| Pollution Degree Level II | per IEC 664 |
| Operating Temperature | 32-122 °F [0-50 °C] |
| Humidity | Maximum relative humidity 80% for temperature up to 88 °F [31 °C] decreasing linearly to 50% relative humidity at 104 °F [40 °C] |

OPTIONS

- IO:** 4 to 20 mA current output
- AO:** 0 to 5 Vdc analog output
 - NOTE:** Full scale RPM must be specified for the above options when ordering unless the USB Programming Cable and PM Remote Software is ordered as a separate item.
- PO:** 0 to 5 V TTL compatible pulse output
 - NOTE:** Pulses out per revolution equal pulses in per revolution.
- CAL-N.I.S.T.** N.I.S.T. Traceable Certificate of Calibration

SPECIFICATIONS

- Range:** 5 to 99,999 RPM
- Accuracy:** ± 1 RPM or 0.005% of reading
- Resolution:** 1 RPM (user programmable to 0.0001*)
- Display:** 5 digit, 0.56" (14 mm) high red LED
- Display Update:** Twice per second above 120 RPM (user programmable to 0.5, 1, or 1.5 second*)
- Dimensions:** 1/8 DIN by 4.5" (114 mm) deep
- Power Supply:** Standard: 100 - 240 Vac $\pm 10\%$, 50/60 Hz, 5VA
Optional: 12 or 24 Vdc $\pm 10\%$, Isolated, 5 Watts
- Inputs:** Universal input for optical, proximity, two-wire or three-wire magnetic, infrared or laser sensors
TTL input or 2 Vac to 50 Vac peak to peak input
Standard input is 1 pulse per revolution. (user programmable from 1 to 999*)

Sensor Excitation: 12 Vdc at 20 mA for proximity sensors, 12 Vdc at 75 mA for all other sensors, Optional 5 or 24 Vdc available

- Recommended Sensors:**
- Optical - Monarch ROS-W
 - Proximity - Monarch P5-11
 - Magnetic - Monarch M-190W or MT-190W
 - Infrared - Monarch IRS-W
 - Laser - Monarch ROLS-W

IO Option: 4 to 20 mA out, 16 bit resolution 12Vdc compliance voltage. See page 7 for maximum load calculation. Full scale RPM settings as specified when ordered. (user programmable*)

AO Option: 0 to 5 Vdc out, 5 mA 16 bit resolution. Full scale RPM settings as specified when ordered. (user programmable*)

PO Option: 0 to 5 V TTL pulse, non-inverting, one pulse out for each pulse in. (Positive or negative out programmable*)

* Requires optional USB Programming Cable and PM Remote Software

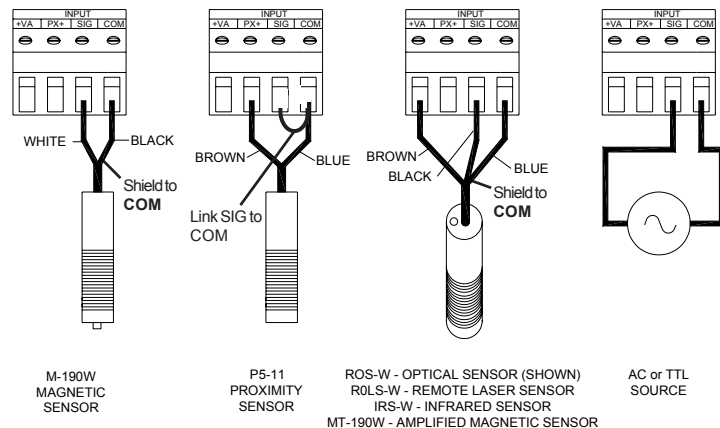


Figure 3 Sensor Connections

OUTPUT OPTIONS

The ACT-1B may be equipped with either a Current Output (IO) *or* an Analog Output (AO), *and/or* a TTL Pulse Output (PO).

NOTE: Full scale RPM settings must have been specified when ordered or may be user programmed using the optional USB Programming Cable and PM Remote Software.

The Current or Analog Outputs are connected to the terminals in the section labeled **ANALOG OUTPUT OPTION** on the rear panel. The actual output is marked. The Pulse Output is connected to the terminals under the section labeled **OUT** on the rear panel.

CAUTION: The IO or AO COM may *NOT* be isolated from the other COM connections.

Current Output Option (IO)

The current output is 4 to 20 mA. This output is a current source and has a 12 Vdc internal compliance voltage. (Optional 24 Vdc may be ordered).

Typical connections are as follows: (See Figure 4.)

Connect the Positive side of the load to the terminal marked **OUT** and the other (Negative) side of the load to the terminal marked **COM**.

Do not use an external voltage supply.

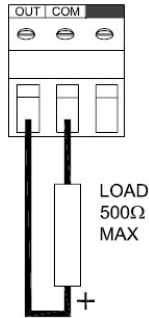


Figure 4 Current Output Option Connections

NOTE: With the internal 12 Vdc compliance voltage the maximum load for the current loop is 500 Ohms.

If the optional 24 Vdc compliance option is ordered the maximum load will be 1000 Ohms.

Analog Output Option (AO)

The analog output is 0 to 5 Vdc.

Connect the Positive side of the signal to the terminal marked **OUT**, and the Return side of the signal to the terminal marked **COM**.

NOTE: If your ACT-1B is equipped with either a current output or an analog output, the full-scale output has been factory preset to the speed range specified at the time of purchase. The output range may be programmed using the optional USB Programming Cable and PM Remote Software.

Pulse Repeater Output Option (PO)

The Pulse Repeater output provides a conditioned TTL positive going 5 V pulse out for each pulse in.

Connect the Positive signal wire (+5 V pulse) to terminal marked **+P** and the Return to the terminal marked **COM** in the rear panel section labeled **OUT**.

NOTE: The polarity of the optional pulse output can be set by the user using the optional USB Programming Cable and PM Remote Software.